

Powdermaster Changing the Brush strips

To change the brush strips first expose the feed rotor assembly by removing the bottom cover,
Then remove the end block furthest away from the motor.
Undo the screws holding the brush strips in and remove them.
Fit new brush strips making sure you fit them in the right way round.
Re-fit the end block.



MOTOR END

