



If when you first mount the ULV applicator you have no output check the following.

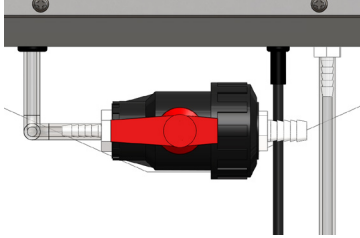


Make sure the 3 way valve tap is set in the run position as shown.


If the tap is in the correct positions make sure that the peristaltic pump cover is in place. If not the pump will not draw liquid from the tank. To do this follow the instructions below

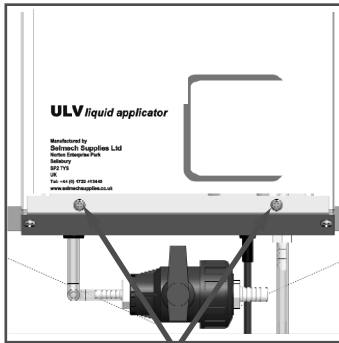

Remove the 2 M5 screws holding the pump chamber cover in place and remove cover to access the pump.

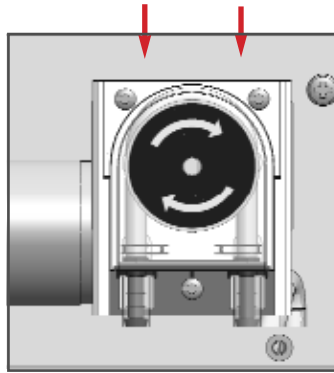

Slide the pump housing onto the pump head back plate. Fit and tighten the two screws whilst applying firm downward pressure on the pump housing.

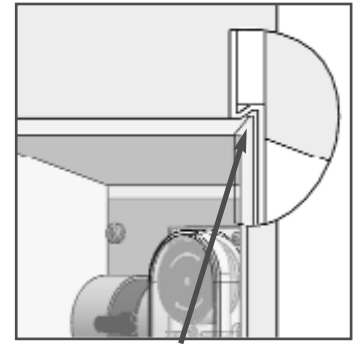

Refit the chamber cover sliding upwards locating the angle end in the groove at the top, fit screws and tighten.

Peristaltic pump tube

Check the peristaltic pump tube. If has been left over winter with the pump rollers can pinch it and when you come to use it again the pinch point blocks the flow. You may be able to release the pinch point but it would be best to fit a new tube.

Inspect the tube for splits, this will prevent it pumping.

Refer to the "Changing the peristaltic tube" instruction to guide you through the changing of the tube.

Tube specification - Santoprene tube 4.8mm I/D x 8mm O/D

